



HUMP INDICATES CENTER OF STEERING COLUMN?

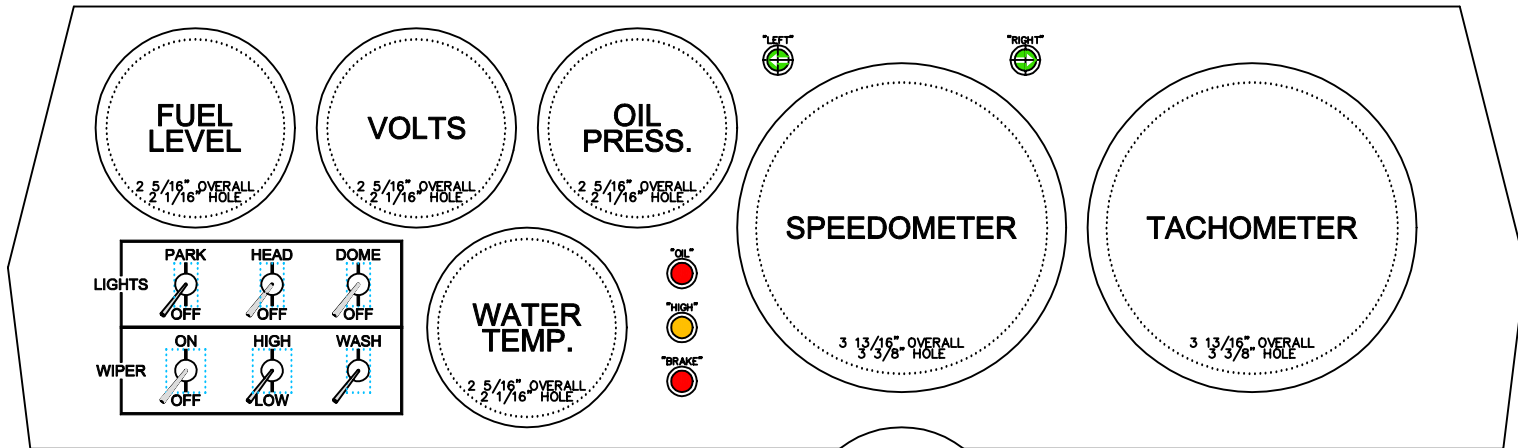

HUMP INDICATES CENTER OF STEERING COLUMN?

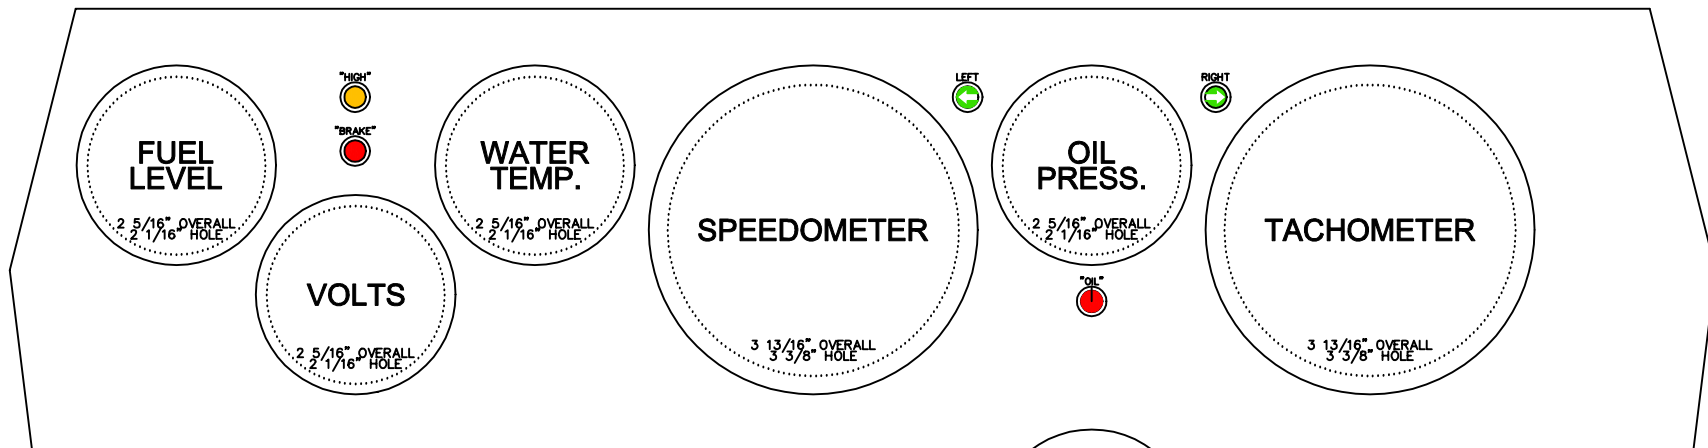

HUMP INDICATES CENTER OF STEERING COLUMN?