


(A) AMMETER FLUCTUATES

(B) BATTERY VOLTAGE FLUCTUATES

(C) IGNITION VOLTAGE FLUCTUATIONS

KEY "ON", ENGINE OFF

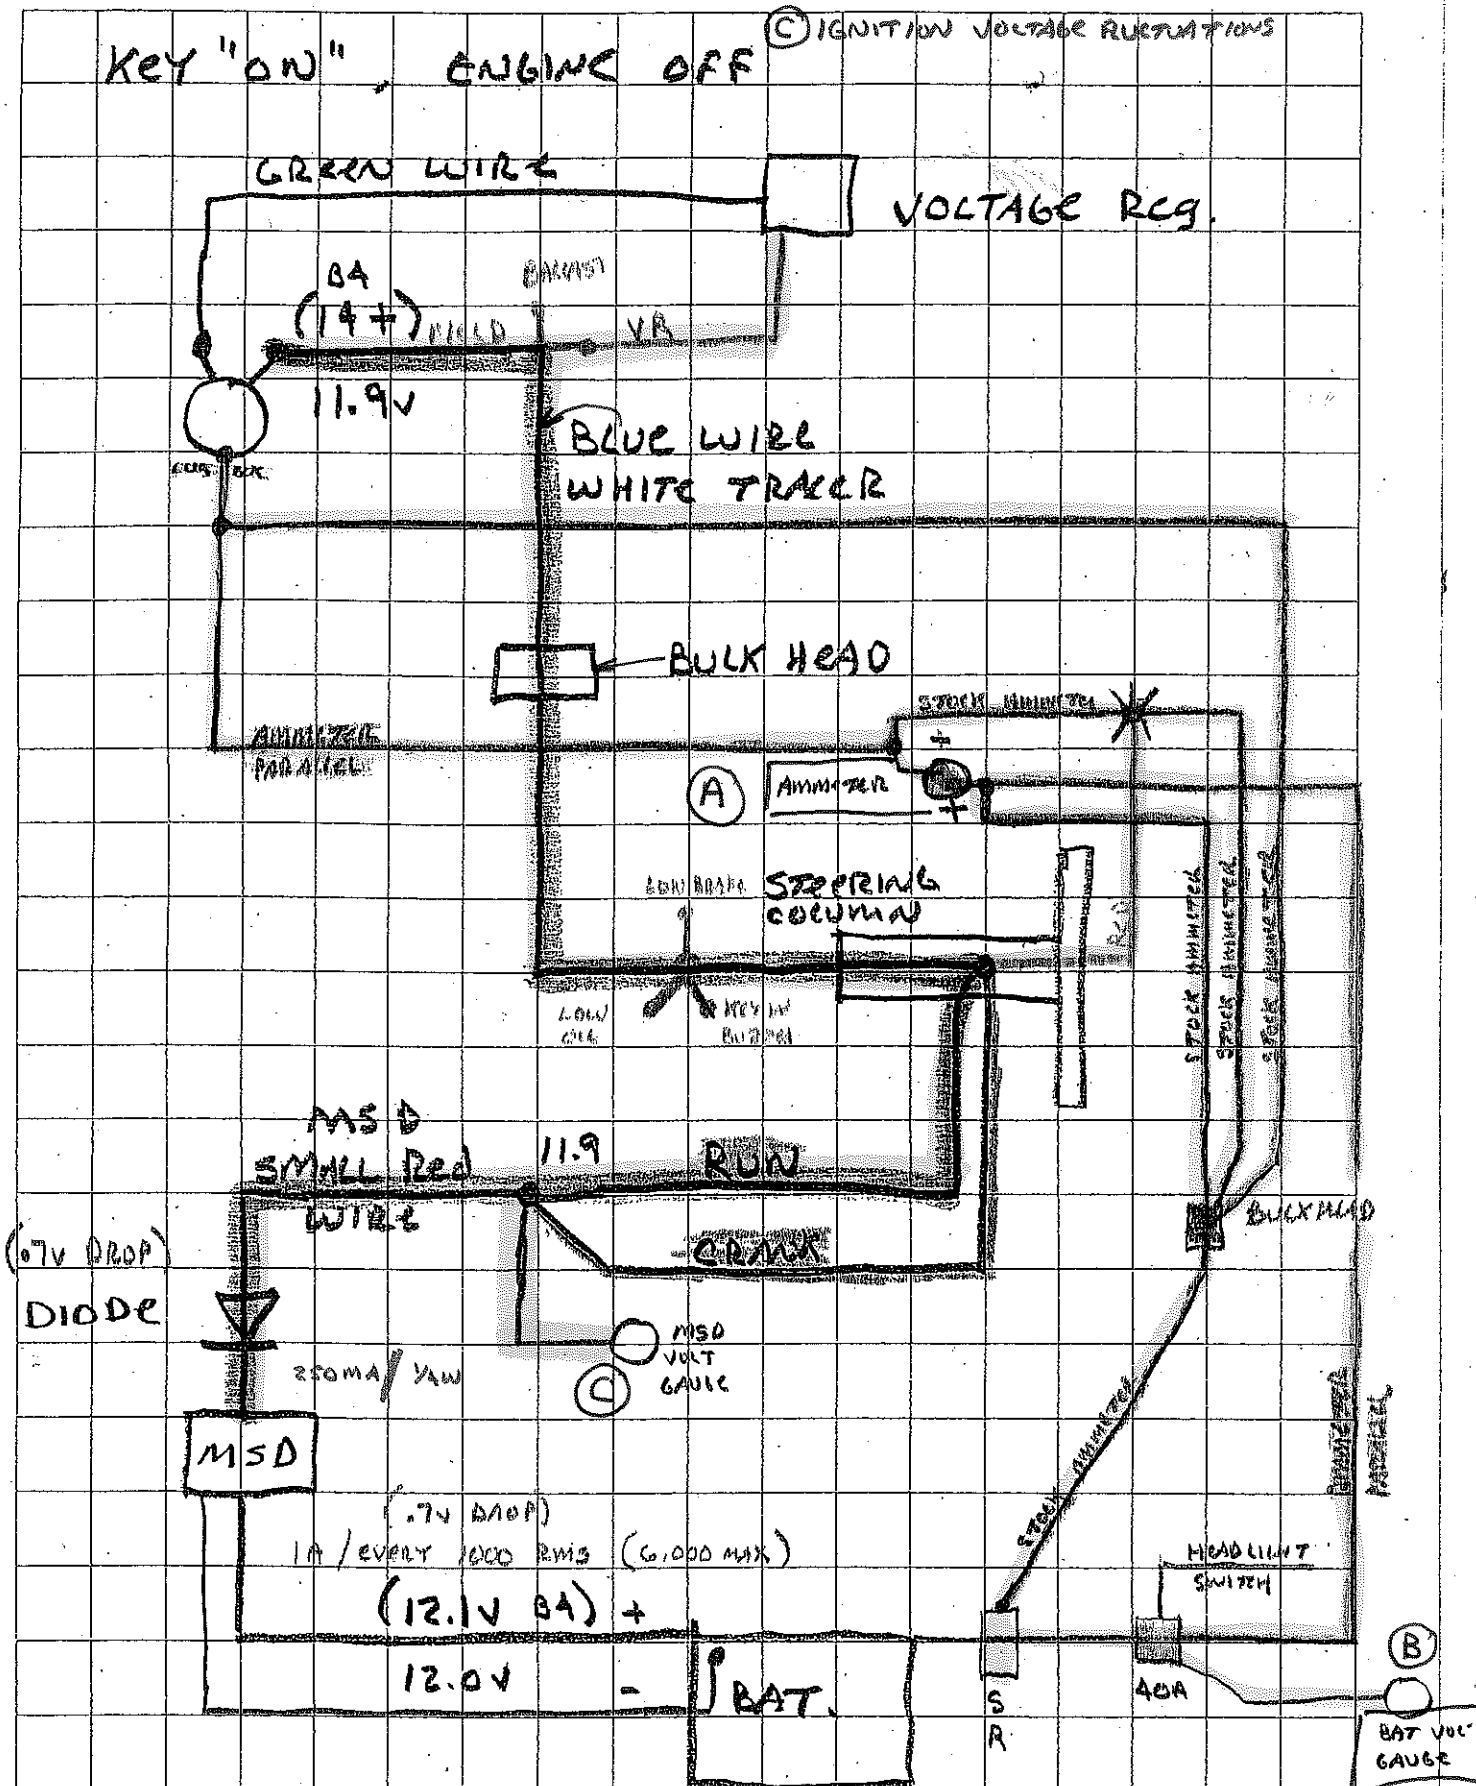

10A DIODE

100V/10A

400V/1.5