

Wiring the Air/Fuel Gauge Kit:

IMPORTANT TECH NOTE:

Remember to connect the **WHITE** wire coming from the gauge to a separate 12v source that is actuated by your vehicle's headlight circuitry. This **WHITE** wire is used to power the backlight of the A/F gauge. If the **WHITE** wire is connected at the same point that the **BLUE** or **BROWN** wires are, flickering of the gauge's backlight will result due to the current draw from the O2 sensor processor's circuitry.

Refer to the wiring schematic below for proper wire connections:

