

M63021

RELIEF VALVE SPRING

( INSTRUCTION SHEET )

The **Pink** colored spring is used with the standard oil pump.

The **Plain** colored spring is used with the Hi-Pressure & Hi-Volume oil pumps.

- ( Note : Your spring selection -
- 1) should not change the low idle pressure,
  - 2) does not change the volume output of the oil pump. )

**M10011**

**IMPORTANT**

**SUBMERGE THE OIL PUMP IN CLEAR OIL AND REVOLVE BY HAND BEFORE INSTALLING IT IN THE ENGINE.**