



INSTRUCTIONS
CERAMIC ENGINE SEAL
(1 Pint)
P/N 35500

NOTE: Moroso Ceramic Engine Seal will not work in a cooling system containing anti-freeze/coolant.

CAUTION: Never remove radiator cap when engine is hot and under pressure. Open petcock slowly to relieve pressure, and then close. Then, take off radiator cap.

In any application, the cooling system should be cleaned, then flushed and refilled with **CLEAR** water before adding Moroso Ceramic Engine Seal.

RACE CARS:

1. **SHAKE BOTTLE WELL AND POUR SEAL INTO RADIATOR WITH ENGINE RUNNING AT OPERATING TEMPERATURE.**
2. Wash filler area, replace cap and run for at least 15 minutes.
3. If still no seal, add another pint of Seal and run for another 15 minutes. If leak still continues, chances are a chemical sealer will not work.
4. **Do not leave Moroso Ceramic Engine Seal in the Engine more than 24 hours.**
5. Before 24 hour period is up, the cooling system should be drained and flushed as follows: Open petcock and start to drain system. Remove radiator cap. Add water to radiator full with petcock draining. Start engine and allow to drain until water runs clear. Close petcock and refill with clear water.

NOT FOR USE WITH ANTI-FREEZE

CAUTION

Avoid contact with eyes and skin. Do not take internally. If splashed on skin, wash off with cool water. If splashed in eyes, flush thoroughly for 15 minutes with cool water. Consult a physician. If taken internally, give 3 or 4 glasses of water or milk. **DO NOT** induce vomiting. Call a physician immediately.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906