

TIMING BELT


REMOVAL AND INSTALLATION

Pre-removal Operation

- Reserve Tank Removal (Refer to GROUP 7 - Radiator.)
- Generator Bracket Removal (Refer to GROUP 8A - Generator.)
- Center Front Under Cover Removal (Refer to GROUP 23A.)
- Jack up the engine and transaxle assembly until there is no weight on the insulators.

Post-installation Operation

- Center Front Under Cover Installation (Refer to GROUP 23A.)
- Generator Bracket Installation (Refer to GROUP 8A - Generator.)
- Reserve Tank Installation (Refer to GROUP 7 - Radiator.)
- Drive Belt Tension Adjustment (Refer to P.9B-8.)

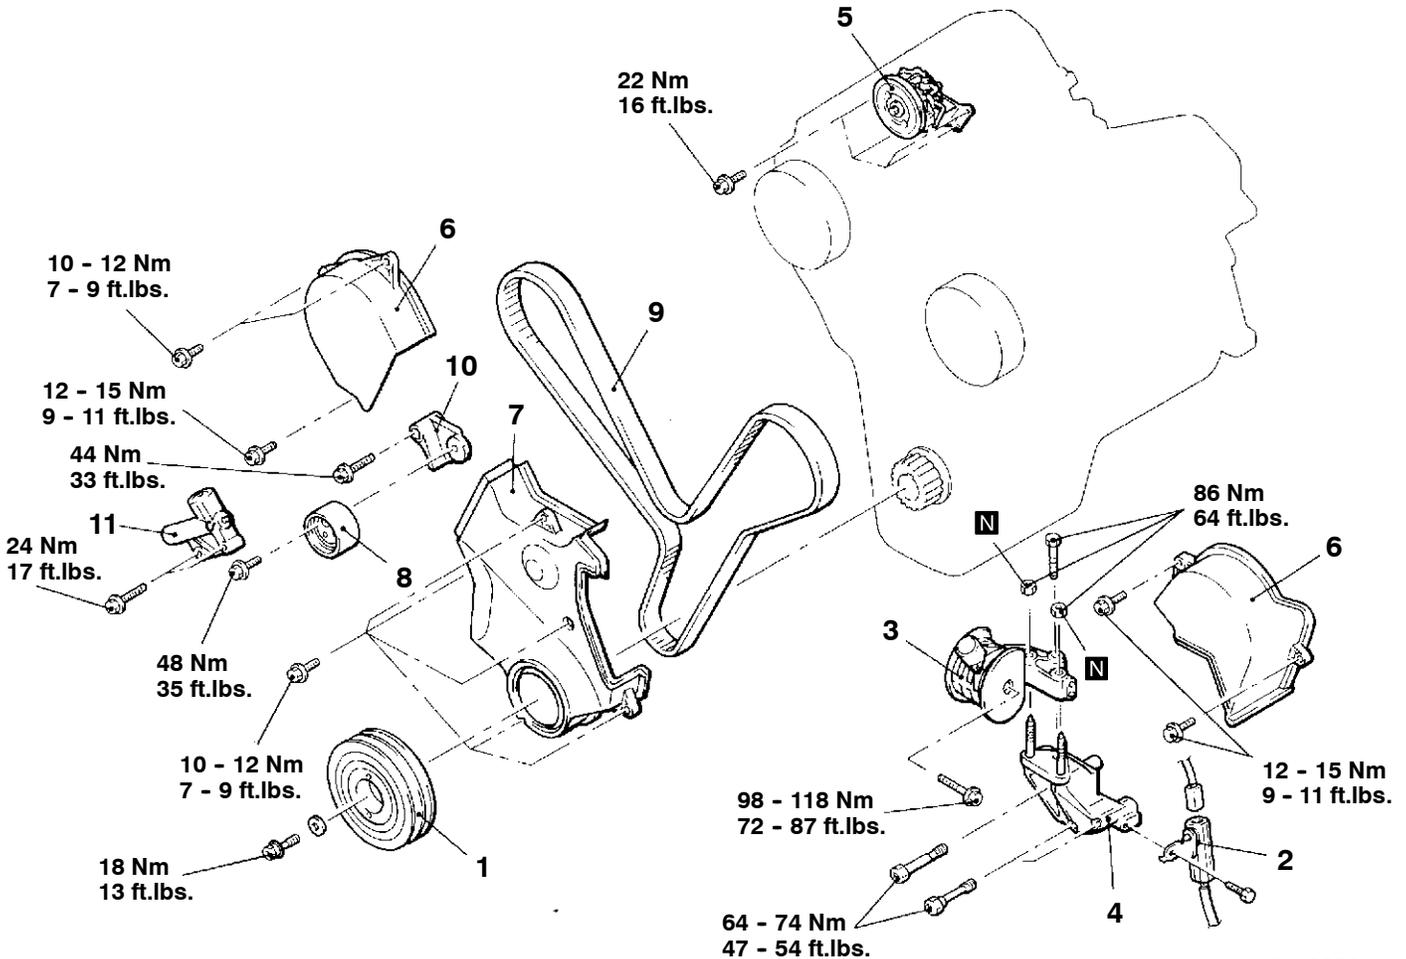

A01X0292

Removal steps

- ◀A▶ ▶F▶ 1. Crankshaft pulley
- ▶E▶ 2. Heated oxygen sensor connection
- ▶B▶ ▶D▶ 3. Engine mount bracket
- ▶C▶ ▶D▶ 4. Engine support bracket
- ▶C▶ 5. Power steering oil pump and bracket assembly
- ▶C▶ 6. Timing belt upper cover
- ▶C▶ 7. Timing belt lower cover
- ▶C▶ • Timing belt tension adjustment
- ▶D▶ ▶B▶ 8. Tensioner pulley
- ▶D▶ ▶B▶ 9. Timing belt
- ▶A▶ ▶B▶ 10. Tensioner arm assembly
- ▶A▶ ▶A▶ 11. Auto tensioner