



CONNECTING THE MSD-6C TO THE CHRYSLER VEHICLE WIRING

After the unit has been mounted and the Battery and Ground connections have been made, prepare the vehicle wiring in accordance with the diagram below. After the vehicle wiring has been modified, plug the vehicle ignition connector into the MSD and the system is ready for operation.

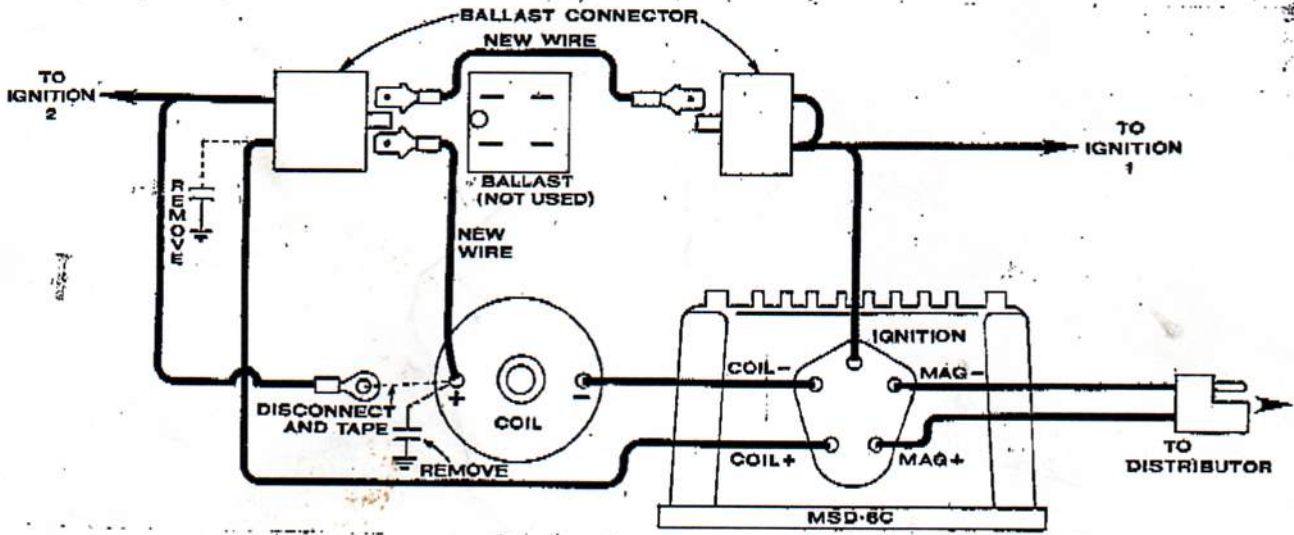

ADDING CRANK TRIGGER TO THE MSD-6C

The MSD-6C combined with a crank trigger wheel offers higher energy and greater timing accuracy. The pictorial below shows how to add crank trigger to your system, using the distributor for starting operation and the crank trigger wheel for run operation.

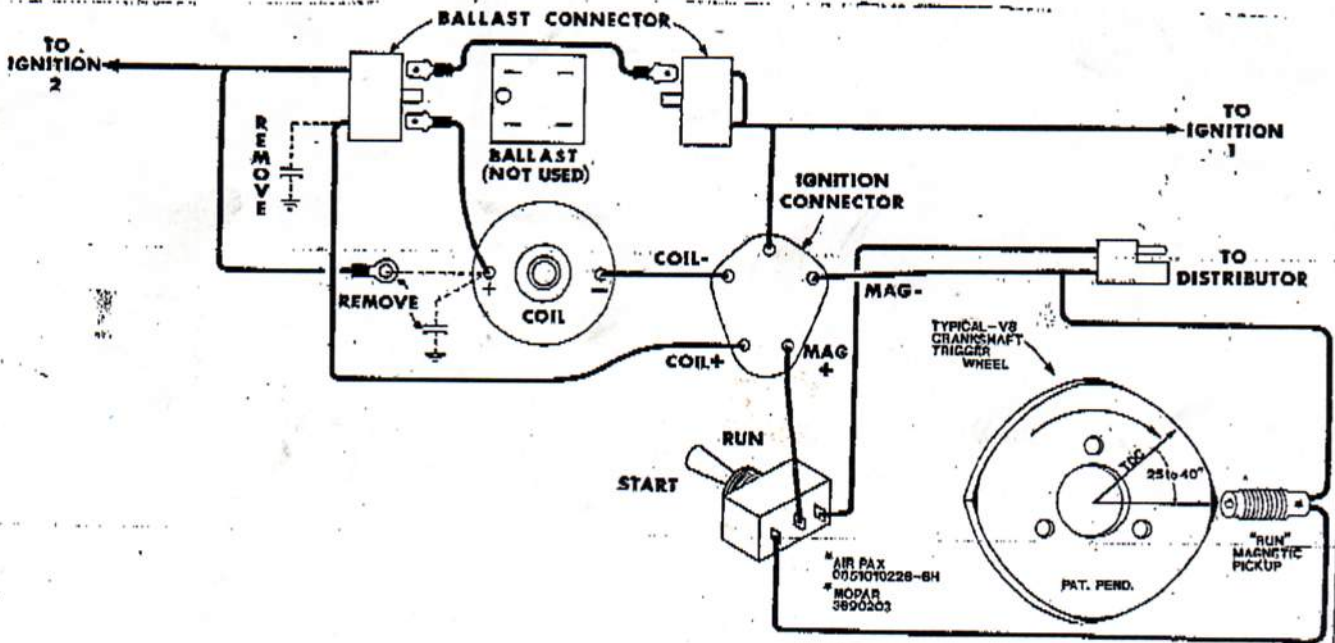

AUTOTRONIC CONTROLS CORPORATION
 6908 COMMERCE, EL PASO, TEXAS 79915 (915) 772-7431