


# LAKEWOOD 15330 & 15335 FASTENER REQUIREMENTS

MoPar 350, 361, 383, 400, 413, 426W, 426H & 440

For this product to meet SFI specification 6.1 the fasteners listed below must be used.

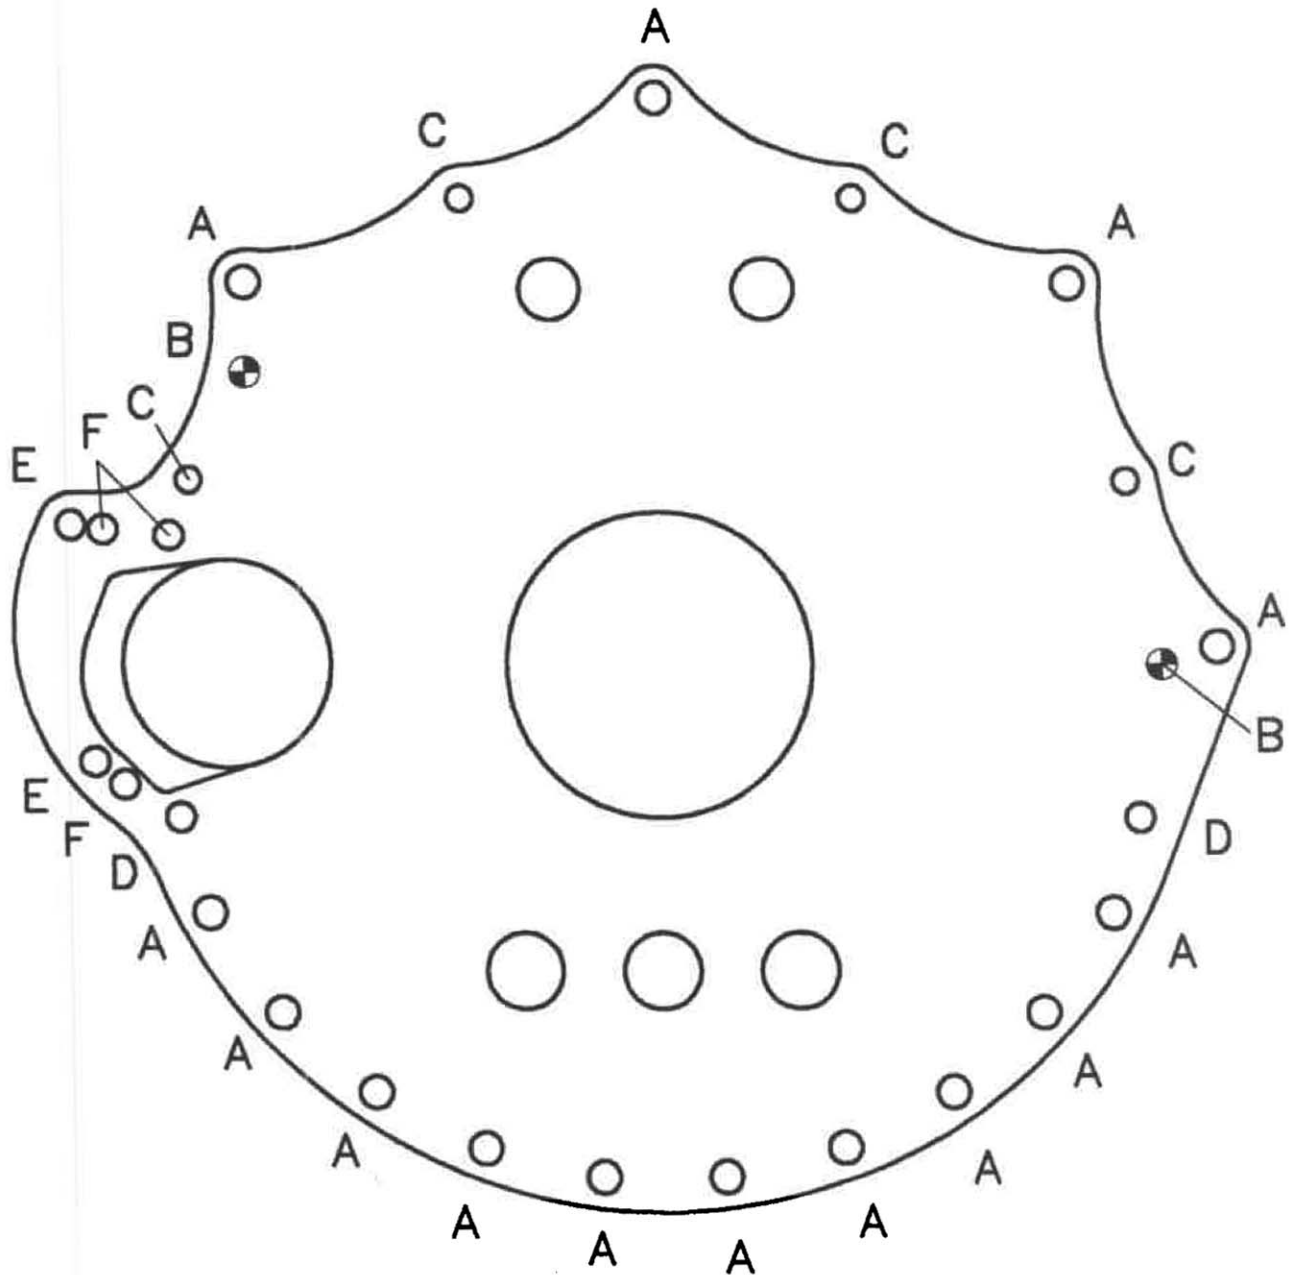

- A = 1/2-13 X 1" GRADE 8 BOLTS, WASHERS & NUTS.
- B = BELLHOUSING LOCATING PINS (NOT INCLUDED)
- C = 3/8-16 X 1" GRADE 8 BOLTS & WASHERS.
- D = 7/16-20 X 1.5" GRADE 8 BOLT, WASHERS & NUTS.
- E = 7/16-20 X 1.5" GRADE 5 STARTER BOLTS (STOCK)
- F = OPTIONAL STARTER BOLT LOCATIONS.