

- 1 (CV80)
INSTALLATION PROCEDURE:
 APPLY C/OUT "A" (TAPE-ROOF TRANSVERSE COLOR STRIPE)
 ALIGNING HUTCH IN CARRIER TAPE TO 20 INCH LINE
 NEXT APPLY C/OUT "A" (TAPE & DECAL ASSY-QTR TRANSVERSE COLOR)
 BUTTING UPPER END OF CARRIER TO OUTBOARD EDGE OF PREVIOUS CARRIER PER (P.S. 3505)




- 2 (CV80)
 REMOVE ADHESIVE BACKING OF C/OUT B
 AND ALIGN CARRIER PAPER TO C/OUT C
 PER (P.S. 3911)

- A** S/O 3569812 (ALL)
- 3569812 TAPE-ROOF TRANSVERSE COLOR (WHITE)
 3569813 (BLACK)
 3569814 (GOLD)
- 3569822 TAPE & DECAL ASSY-ROOF & QTR (RT)(GOLD)
 3569820 (BLACK)
 3569810 (WHITE)
- 3613011 TAPE & DECAL ASSY-ROOF & QTR (LT)(GOLD)
 3613013 (BLACK)
 3613015 (WHITE)

- B** 2964112-3 DECAL BIRD

- C** NAMEPLATE (REF)

- D** S/O 3613862 (SERVICE)
- 3613870-1 TAPE & DECAL ASSY-QTR TRANS COLOR (BLACK)
 3613872-3 (WHITE)
 3613874-5 (GOLD)

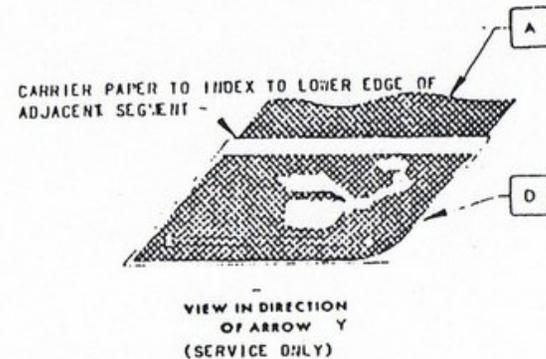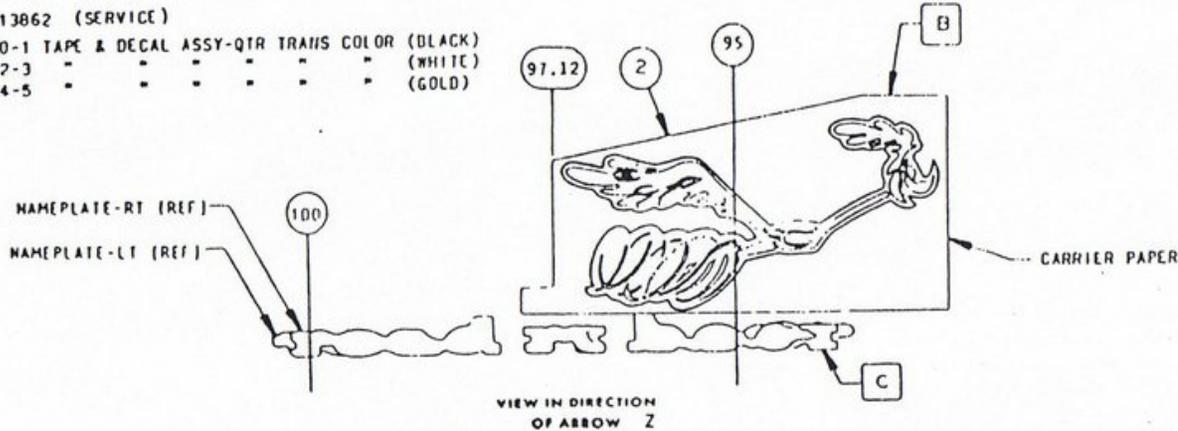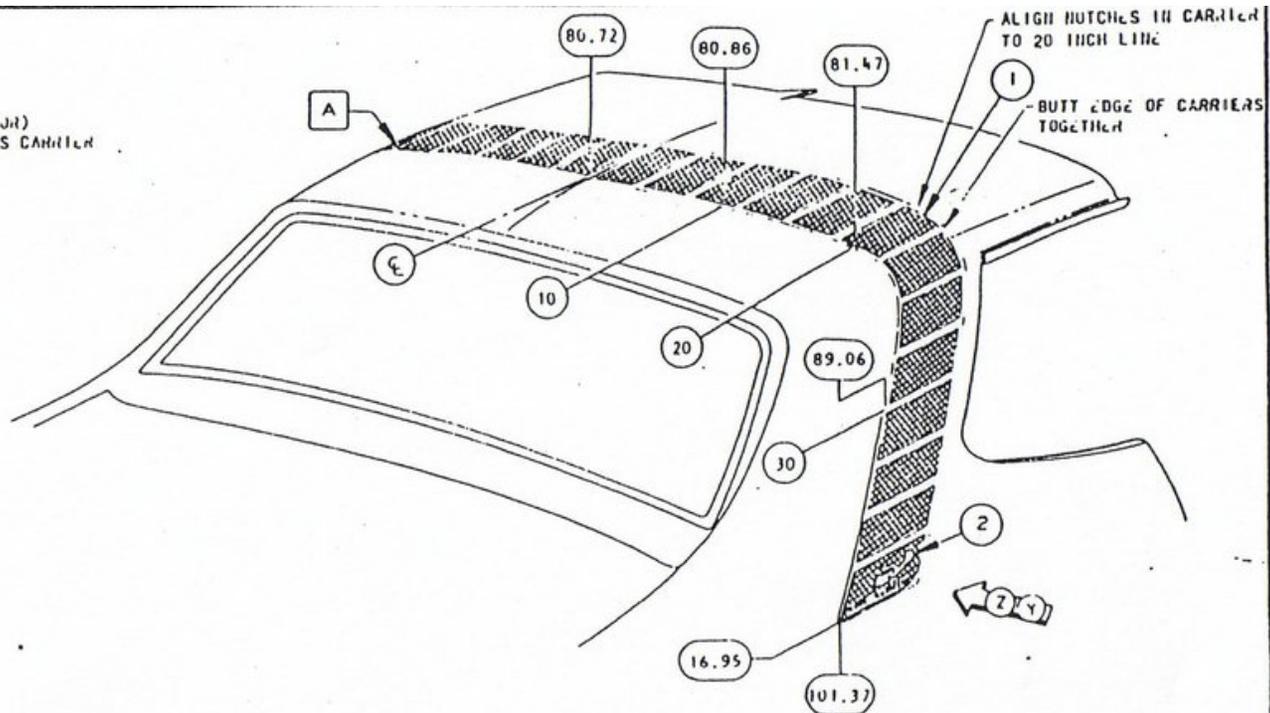

REF: STYLING LAYOUT R-40704

				PAINT			
				MODELS 6/R-M-23 CV8C/V10			
				DESIGN CHECKED BY <i>E.A.H.</i> DRAWN BY <i>E.A.H.</i>		DATE 3-3-70	
				ENGINEERING ILLUSTRATION DEPT 3050		CHRYSLER CORPORATION 3411109	
				TAPE STRIPE & BIRD DECAL-ROOF & QTR		SECTION B 22.0	