

768mm from centerline, 6mm from lower edge of character line

603mm from centerline, 5mm from lower edge of character line

426mm from centerline, 5mm from lower edge of character line

172mm from centerline, 5mm from lower edge of character line



Centerline of tail panel. Measured from quarter panel lip to quarter panel lip

172mm from centerline, 5mm from lower edge of character line

426mm from centerline, 5mm from lower edge of character line


603mm from centerline, 5mm from lower edge of character line

768mm from centerline, 6mm from lower edge of character line

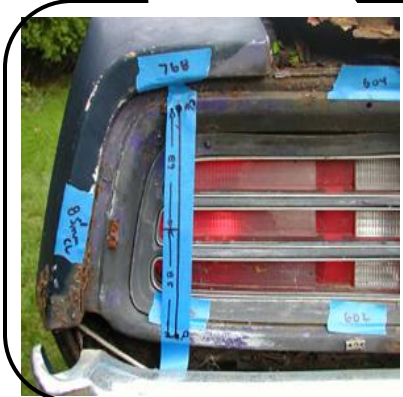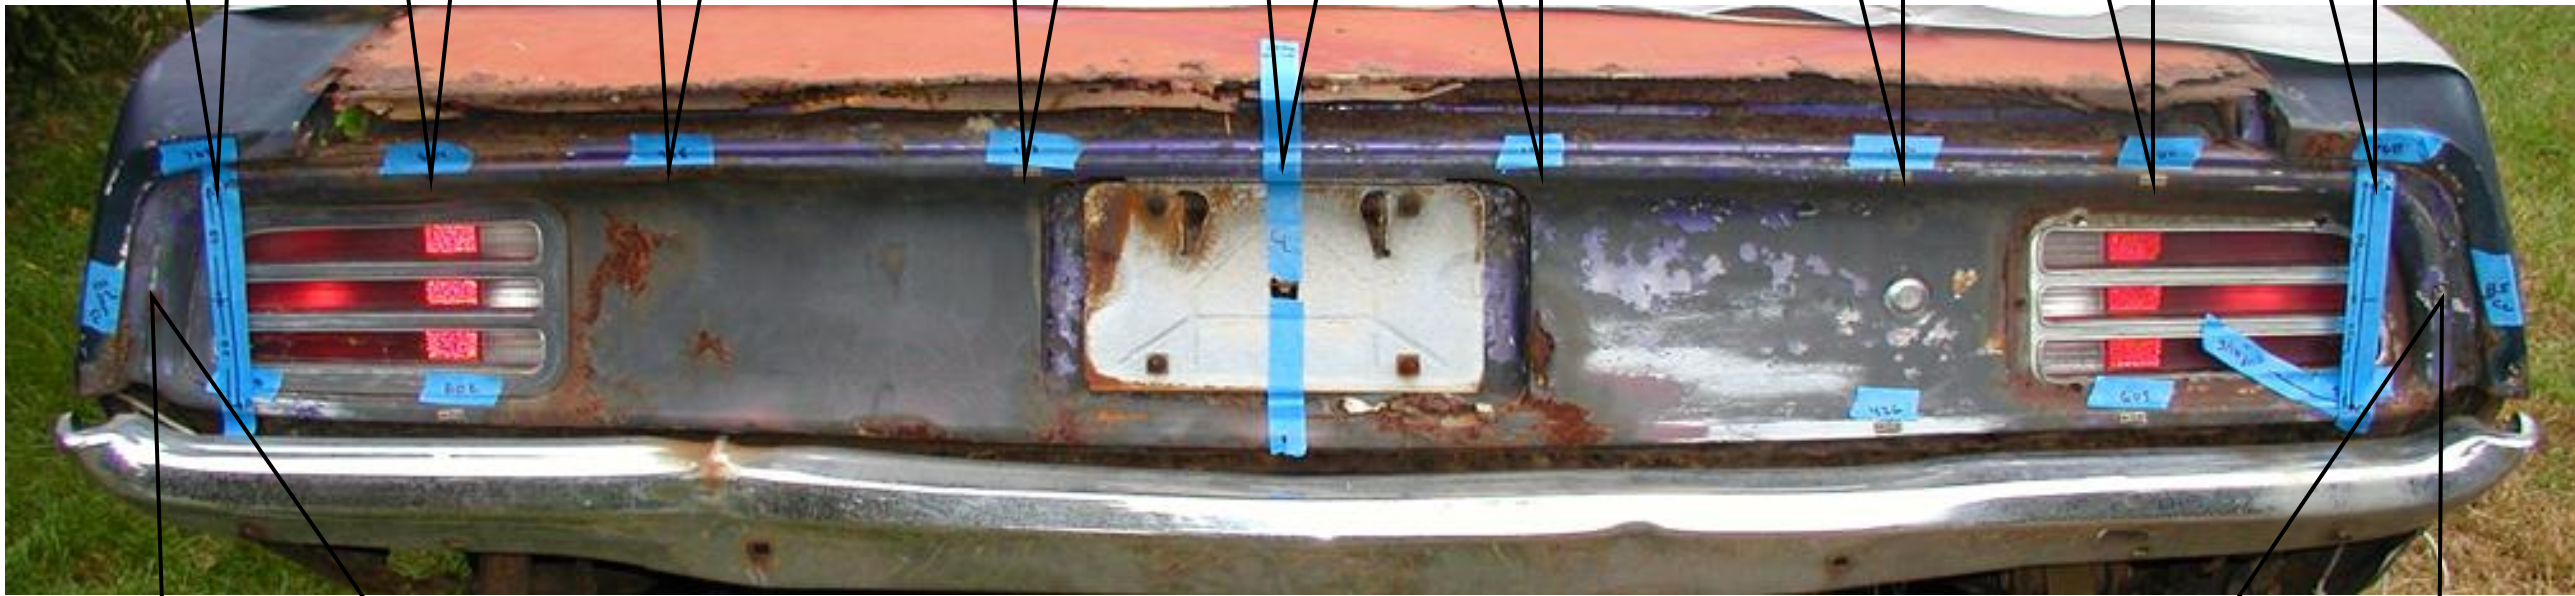

For side clip, on a line through the 2 end clips, draw a line perpendicular at 85mm above the center of the lower hole. Extend this line out to the character line of the panel to locate the center of the side clip hole.

The clips along the bottom are at the same positions as the clips along the top. All holes are a 3/16" drill hole. The 3 end clips are metal (the lower 2 are missing and assumed to be metal), all other clips are plastic. Before drilling any holes, position the trim pieces in place and measure to ensure the holes are in the proper position on the character line. Holes should be drilled before painting the tail panel, the paint color change line should be at the center line of the holes.

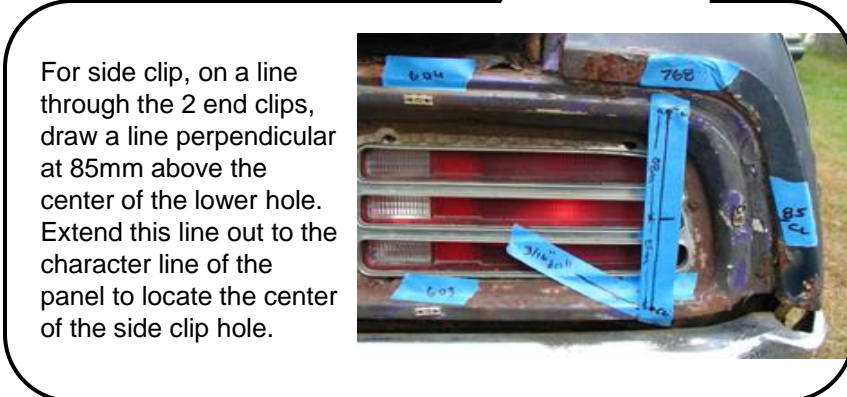

For side clip, on a line through the 2 end clips, draw a line perpendicular at 85mm above the center of the lower hole. Extend this line out to the character line of the panel to locate the center of the side clip hole.