



NUMBER: 23-013-04

GROUP: Body

DATE: May 4, 2004

This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of DaimlerChrysler Corporation.

THIS BULLETIN SUPERSEDES TECHNICAL SERVICE BULLETIN 23-047-02, DATED DEC. 13, 2002, WHICH SHOULD BE REMOVED FROM YOUR FILES. ALL REVISIONS ARE HIGHLIGHTED WITH **ASTERISKS**** AND INCLUDES UPDATES TO THE PARTS REQUIRED AND AN ADDITIONAL MODEL YEAR.**

SUBJECT:

Interior Front Door Handle/Bezel Replacement

OVERVIEW:

This bulletin provides information to allow replacement of interior front door handle/bezel instead of replacement of the door trim panel.

MODELS:

1998 - ****2004**** (LH) LHS/300M/Concorde/Intrepid

SYMPTOM/CONDITION:

An interior front door handle/bezel requires replacement.

****PARTS REQUIRED:**

Qty.	Part No.	Description
AR	05102832AA	Handle/Bezel, Left, Intrepid, Agate, Trim Codes AZ or D5
AR	05102833AA	Handle/Bezel, Right, Intrepid, Agate, Trim Codes AZ or D5
AR	05102834AA	Handle/Bezel, Right, Intrepid, Dk Camel, Trim Code K9
AR	05102835AA	Handle/Bezel, Left, Intrepid, Dk Camel, Trim Code K9
AR	05102836AA	Handle/Bezel, Right, Intrepid, Dk Slate, Trim Code DV
AR	05102837AA	Handle/Bezel, Right, Intrepid, Dk Sandstone, Trim Code T5
AR	05102838AA	Handle/Bezel, Right, Intrepid, Dk Taupe, Trim Code L5
AR	05102839AA	Handle/Bezel, Left, Intrepid, Dk Slate, Trim Code DV
AR	05102840AA	Handle/Bezel, Left, Intrepid, Dk Sandstone, Trim Code T5
AR	05102841AA	Handle/Bezel, Left, Intrepid, Dk Taupe, Trim Code L5
AR	05102842AA	Handle/Bezel, Right, LHS/300, Agate, Trim Codes AZ or



Qty.	Part No.	Description
		D5
AR	05102844AA	Handle/Bezel, Left, LHS/300M, Agate, Trim Codes AZ or D5
AR	05102845AA	Handle/Bezel, Left, LHS/300M, Dk Camel, Trim Codes K9 or FK
AR	05102846AA	Handle/Bezel, Right, LHS/300M, Dk Camel, Trim Codes K9 or FK
AR	05102847AA	Handle/Bezel, Right, LHS/300M/Concorde Limited, Dk Slate, Trim Codes DV, D2 or ZA
AR	05102849AA	Handle/Bezel, Left, LHS/300M/Concorde Limited, Dk Slate, Trim Codes DV, D2 or ZA
AR	05102850AA	Handle/Bezel, Right, LHS/300M/Concorde Limited, Dk Sandstone, Trim Code T5
AR	05102851AA	Handle/Bezel, Left, LHS/300M/Concorde Limited, Dk Sandstone, Trim Code T5
AR	05102852AA	Handle/Bezel, Right, LHS/300M/Concorde Limited, Dk Taupe, Trim Codes L5 or L2
AR	05102853AA	Handle/Bezel, Left, LHS/300M/Concorde Limited, Dk Taupe, Trim Codes L5 or L2
AR	05102854AA	Handle/Bezel Woodgrain, Left, Concorde, Agate, Color Handle, Trim Codes AZ or D5
AR	05102855AA	Handle/Bezel Woodgrain, Right, Concorde, Agate, Color Handle, Trim Codes AZ or D5
AR	05102856AA	Handle/Bezel Woodgrain, Left, Concorde, Dk Camel, Color Handle, Trim Code K9
AR	05102857AA	Handle/Bezel Woodgrain, Right, Concorde, Dk Camel, Color Handle, Trim Code K9
AR	05102858AA	Handle/Bezel Woodgrain, Right, Concorde, Dk Camel, Chrome Handle, Trim Code K9
AR	05102859AA	Handle/Bezel Woodgrain, Left, Concorde, Dk Camel, Chrome Handle, Trim Code K9
AR	05102860AA	Handle/Bezel Woodgrain, Right, Concorde, Agate, Chrome Handle, Trim Codes AZ or D5
AR	05102861AA	Handle/Bezel Woodgrain, Left, Concorde, Agate, Chrome Handle, Trim Codes AZ or D5
AR	05102862AA	Handle/Bezel Woodgrain, Left, Concorde, Dk Slate, Chrome Handle, Trim Code DV
AR	05102863AA	Handle/Bezel Woodgrain, Right, Concorde, Dk Slate, Chrome Handle, Trim Code DV
AR	05102864AA	Handle/Bezel Woodgrain, Left, Concorde, Dk Sandstone, Chrome Handle, Trim Code T5

Qty.	Part No.	Description
AR	05102865AA	Handle/Bezel Woodgrain, Right, Concorde, Dk Sandstone, Chrome Handle, Trim Code T5
AR	05102866AA	Handle/Bezel Woodgrain, Left, Concorde, Dk Taupe, Chrome Handle, Trim Code L5
AR	05102867AA	Handle/Bezel Woodgrain, Right, Concorde, Dk Taupe, Chrome Handle, Trim Code L5

**


NOTE: Each kit contains one handle/bezel assembly, six pushnuts and an instruction sheet.

SPECIAL TOOLS/EQUIPMENT REQUIRED:

NPN	21/64 in. (8.3mm) Drill Bit
-----	-----------------------------

REPAIR PROCEDURE:


1. Remove the front door trim panel using the procedures outlined on TechCONNECT or in Section 23 of the appropriate service manual.
2. After placing the door trim panel on a clean work surface, use a 21/64 in. drill bit to drill out the mounting boss heat stakes that attach the existing door handle/bezel to the trim panel. Take extra care to drill in the center of each heat stake, ([Fig. 1](#)).

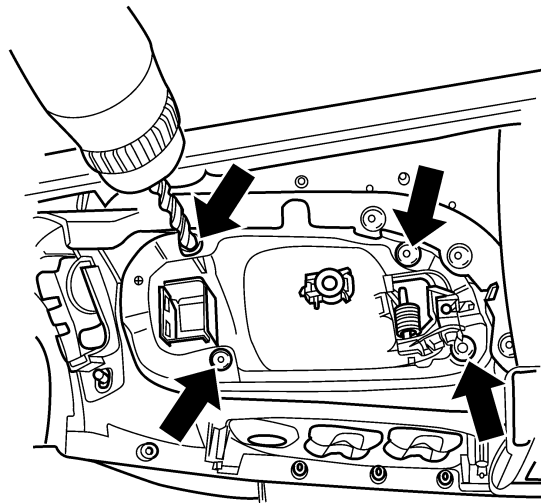

810d26e2

Fig. 1 DRILL 4 HEAT STAKES

3. Remove the existing handle/bezel from trim panel.
4. Clean the back of the trim panel of all plastic filings.
5. Seat the new handle/bezel into position.
6. Place the push nuts onto the handle/bezel bosses.
7. Use a 10mm socket to install the push nuts all the way down on the mounting bosses to secure the handle/bezel onto the door trim panel. Using a wiggling side to side motion may be helpful, ([Fig. 2](#)).

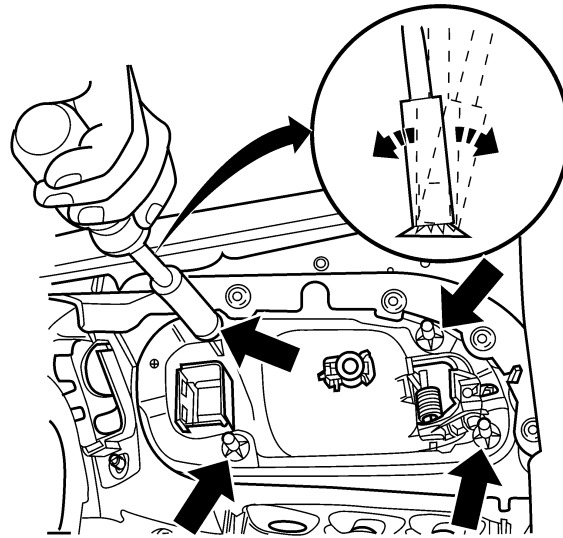

810d26e1

Fig. 2 INSTALL PUSH NUTS

8. Install the lock switch from the original handle/bezel to the new door handle/bezel.
9. Install the door trim panel using the procedures outlined on TechConnect or in Section 23 of the appropriate service manual.

POLICY:

Reimbursable within the provisions of the warranty.

TIME ALLOWANCE:

Labor Operation No:	Description	Amount
23-42-45-92/93	Replace Front Door Handle, Right or Left	0.4 Hrs.

FAILURE CODE:

P8	New Part
----	----------