Diagram 1

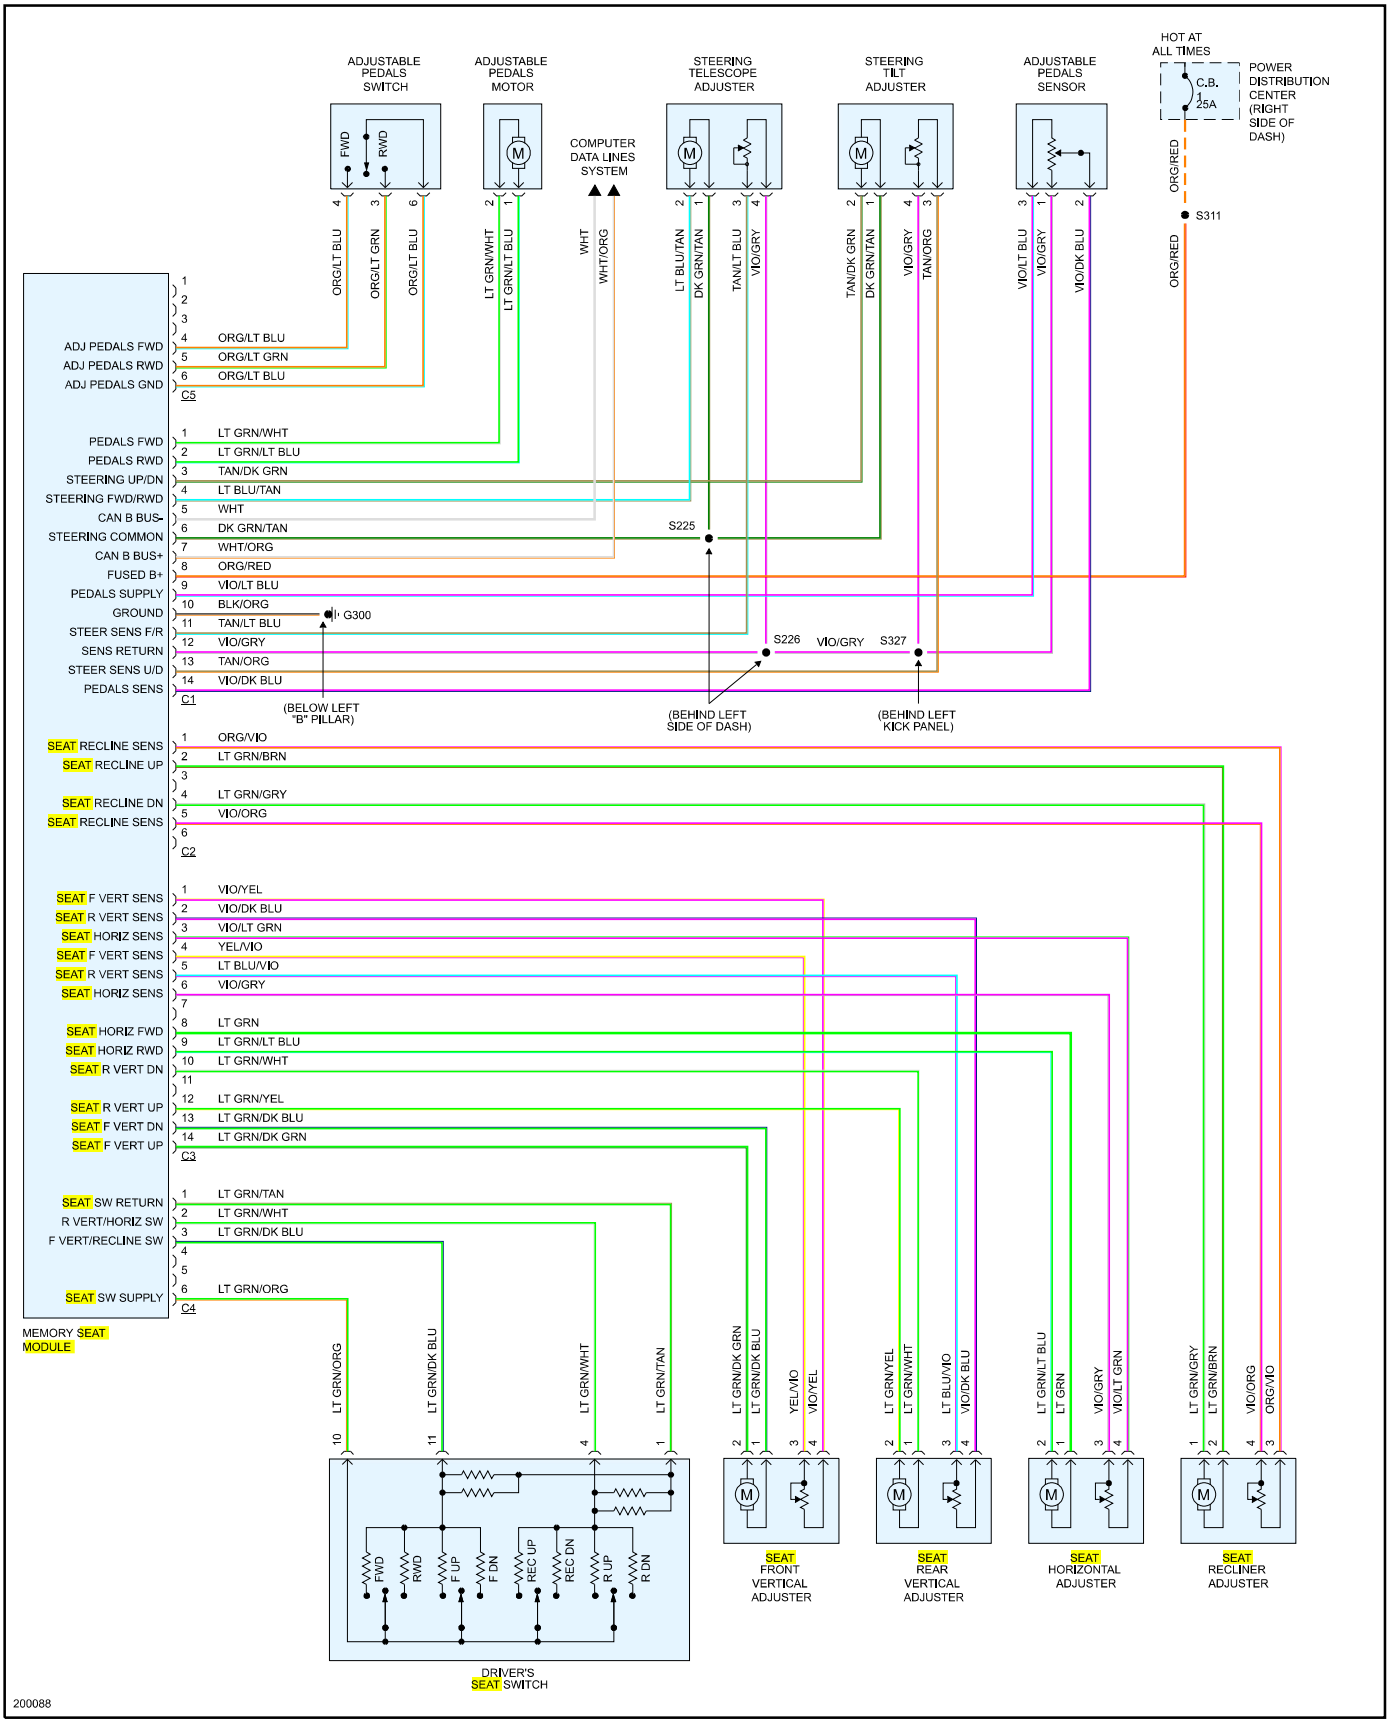
ADJUSTABLE PEDALS SWITCH
ADJUSTABLE PEDALS MOTOR
COMPUTER DATA LINES SYSTEM
STEERING TELESCOPE ADJUSTER
STEERING TILT ADJUSTER
ADJUSTABLE PEDALS SENSOR
HOT AT ALL TIMES
C.B. 1 25A
POWER DISTRIBUTION CENTER (RIGHT SIDE OF DASH)
FWD
RWD
ORG/RED
S311
ADJ PEDALS FWD
ADJ PEDALS RWD
ADJ PEDALS GND
C5
PEDALS FWD
PEDALS RWD
STEERING UP/DN
STEERING FWD/RWD
CAN B BUS-
STEERING COMMON
CAN B BUS+
FUSED B+
PEDALS SUPPLY
GROUND
STEER SENS F/R
SENS RETURN
STEER SENS U/D
PEDALS SENS
C1
G300
S225
S226
S327
VIO/GRY
(BELOW LEFT "B" PILLAR)
(BEHIND LEFT SIDE OF DASH)
(BEHIND LEFT KICK PANEL)
SEAT RECLINE SENS
SEAT RECLINE UP
SEAT RECLINE DN
SEAT RECLINE SENS
C2
SEAT F VERT SENS
SEAT R VERT SENS
SEAT HORIZ SENS
SEAT F VERT SENS
SEAT R VERT SENS
SEAT HORIZ SENS
SEAT HORIZ FWD
SEAT HORIZ RWD
SEAT R VERT DN
SEAT R VERT UP
SEAT F VERT DN
SEAT F VERT UP
C3
SEAT SW RETURN
R VERT/HORIZ SW
F VERT/RECLINE SW
SEAT SW SUPPLY
C4
MEMORY SEAT MODULE
FWD
RWD
F UP
F DN
REC UP
REC DN
R UP
R DN
DRIVER'S SEAT SWITCH
SEAT FRONT VERTICAL ADJUSTER
SEAT REAR VERTICAL ADJUSTER
SEAT HORIZONTAL ADJUSTER
SEAT RECLINER ADJUSTER
200088